

DON'T!

- Use in a microwave oven
- Put any plastic in oven or grill
- Crimp the cord
- Let the cord come into direct contact with flames
- Use in an oven or grill over 482°F (250°C)
- Touch hot metal parts with bare hands

NOT waterproof or water resistant.

Operation is Subject To The Following Two Conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of this device.

One Year Limited Warranty

Taylor® warrants this product to be free from defects in material or workmanship for one (1) year from date of original purchase for original purchaser (excluding batteries).

©2014 Taylor Precision Products, Inc. and its affiliated companies, all rights reserved. Taylor® is a registered trademark and SmarTemp™ is a trademark of Taylor Precision Products, Inc. and its affiliated companies. All rights reserved.

App Store is a service mark of Apple Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. App Store is a service mark of Apple Inc. Google Play is a trademark of Google Inc.

TAYLOR®

1485

SMARTEMP™

FREE APP

TAYLOR SMART THERMOMETER QUICK USE GUIDE

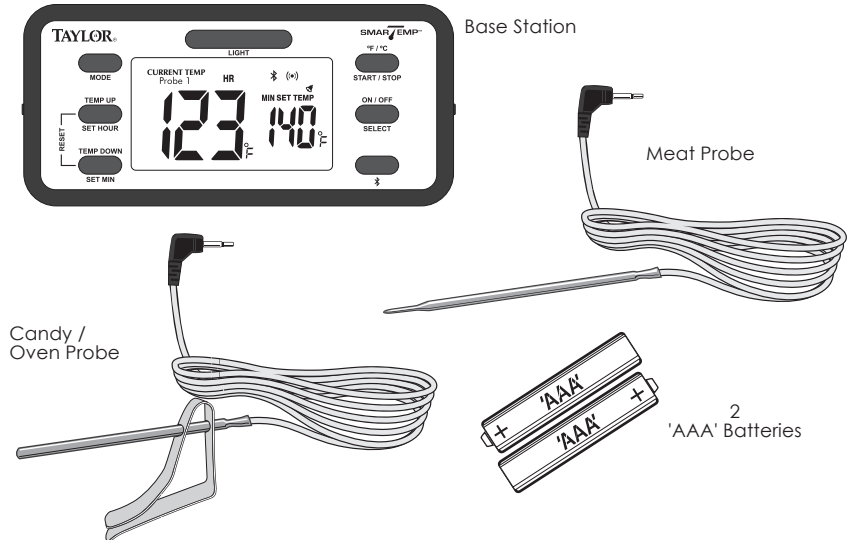
For complete instructions, tap "User Manual" on the SmarTemp app Home Screen, or go to the SmarTemp webpage at www.taylorusa.com

SMART DEVICE REQUIREMENTS

The SmarTemp™ App requires a compatible Bluetooth® smart device. Tap "User Manual" on the SmarTemp app Home Screen for a list of compatible devices, or go to the SmarTemp webpage at www.taylorusa.com

GETTING STARTED

Download the **FREE SmarTemp™** application onto your smart device from either the App Store (for iOS devices) or Google play (for Android devices). Use keyword search terms "SmarTemp", or "Taylor Smart". You may also find the links on the SmarTemp webpage at www.taylorusa.com



HOME SCREEN / CONNECT TO BLUETOOTH

- Turn Bluetooth on.
- Turn on the thermometer base unit. Press the "⌘" button to turn on Bluetooth.
- Launch the SmarTemp app.
- Tap "**Connect Bluetooth**". A "Bluetooth Connected" screen pops up and closes.

COOKING SCREEN

Use to: select a food and a target temperature and/or monitor oven temperatures. Tap " " to switch to the Cooking Screen.

Select a Probe

- Tap "**Probe 1**" to select the left probe plugged into the base unit.
- Tap "**Probe 2**" to select the right probe plugged into the base unit.

Set a Target Temperature

- Tap "**Meat**" to select a meat type from the drop down menu. Tap "**Taste**" to select a taste level. (when appropriate)
- Tap "**Candy**" to select a candy type.
- A preset target temperature appears. Tap "+" or "-" to increase or decrease the preset temperature.

Start Monitoring Cooking Temperature

Meat: Insert the probe into the thickest part of the meat.

Candy: Clip the probe to the side of the pan with the tip at least 2 ½" into the liquid.

Tap "**Start**". A "Temperature Set OK" screen pops up and closes. The set temp will display on the base unit.

Oven Temperature Monitoring

Probe 2 can be used to monitor ambient oven or grill temperatures. Attach the clip on Probe 2 to the oven or grill grate.

Tap "**Probe 2**". Tap "**Oven**". The Oven icon turns red. The current ambient temperatures readings of Probe 2 will update on the screen.

Stop Monitoring Cooking Temperature

Alarms will sound on the smart device and the base unit when the current temperature of the food reaches the target temperature.

A "Program Complete. Stop alarm?" screen pops up. Tap "**Stop**" to stop the app alarm.

 

Press "**ON/OFF**" on the base unit to stop the thermometer alarm.

- Tap "**Stop**" again. A "Save to Memory" screen pops up.
- Tap "**YES**" or "**NO**" to save/not save the cooking event into a History Record.

TIMER SCREEN

Tap " " to switch to the Timer Screen.

'Countdown'

- Tap "**Edit**". The "Set the Timer" screen appears.
- Swipe the "**Hour**" and "**Minute**" columns to the desired time.
- Tap " " to accept the set time. (Tap " " to cancel.)
- Tap "**Start**" to start timing.
- Tap "**Stop**" to pause the timer. Tap "**Start**" to restart timing. Tap "**Stop**" then "**Reset**" to cancel timer.

At zero a "Program Complete. Stop alarm?" screen pops up. Tap "**Stop**" to stop the app alarm. Tap "**Reset**" to clear timer. Press "**ON/OFF**" on the base unit to stop the timer alarm.

'Count up'

- Press "**Start**"

HISTORY SCREEN

Tap " " to switch to the History Screen.

If the save option was chosen when cooking, the History Record saves the food name, time and final temperature.

Add a Photo

- Tap "**Image**".
- Tap "**Take Photo**", "**Choose Existing**", or "**Cancel**".
- Take or add a photo.

An "Image written to photo album" screen pops up after choosing a photo. Tap "**OK**" then "**Done**" to attach and save with the History Record.

Add Notes

- Tap on a History Record in the History Screen.
- Tap the "**Note:**" box.
- Type in the text you want to save with your History Record.
- Tap "**Done**" to save your notes.

Delete History Records

To delete one record: Tap "**Edit**". Tap " " next to the History Record to delete. Tap "**Delete**".

The History Record is deleted.


To delete all records: Tap "**Clear**". Tap "**YES**" in the "Do you want to delete all the data?" popup screen. All records are deleted.

SHARE SCREEN

Tap " " to switch to the Share Screen.

- Tap an icon: **Facebook, Twitter, Instagram or Pinterest**.
- Tap "**Photo**" to take a new photo or choose an existing photo to upload.
- Tap "**Title**" to add a title to your posting.
- Tap "**Comments**" to add text to your posting.
- Tap "**Post**" to send the photo, title and/or text to the social media site.

SETTINGS SCREEN

Tap " " to switch to the Settings Screen.

Select Temperature Unit

Slide the "**Temperature Unit**" dot to choose Fahrenheit (°F) or Celsius (°C) units of measurement.

Select Alarms

- Tap "**Temperature Alarm**" or "**Timer Alarm**" for a list of alarms available.
- Tap the alarm name. A checkmark appears by the selected alarm name.
- Tap "**Back**" to accept the checked alarm tone.